


Column for XUSL4M Light Curtains (Original instruction sheet)


Flash the Qr-code to access the complete User Manual and this Instruction Sheet in different languages.




<http://qr.tesensors.com/XU0006>

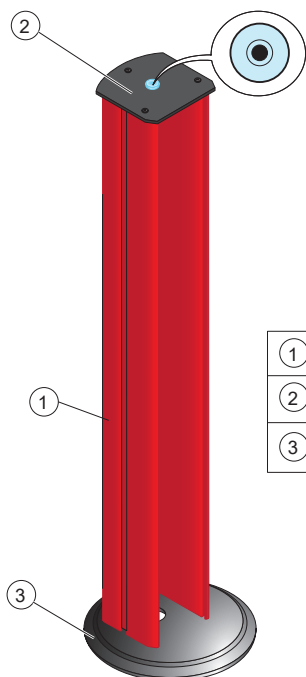

①	Column
②	Top plate with spirit level
③	Base plate

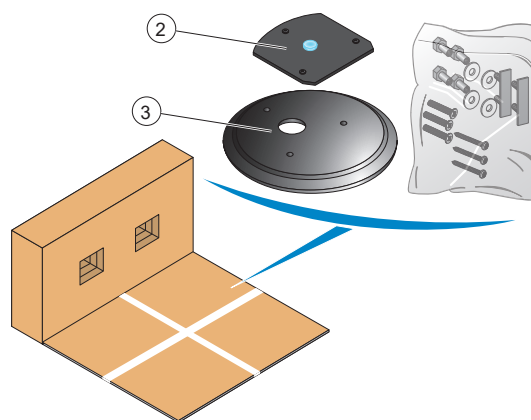


Column installation and adjustment


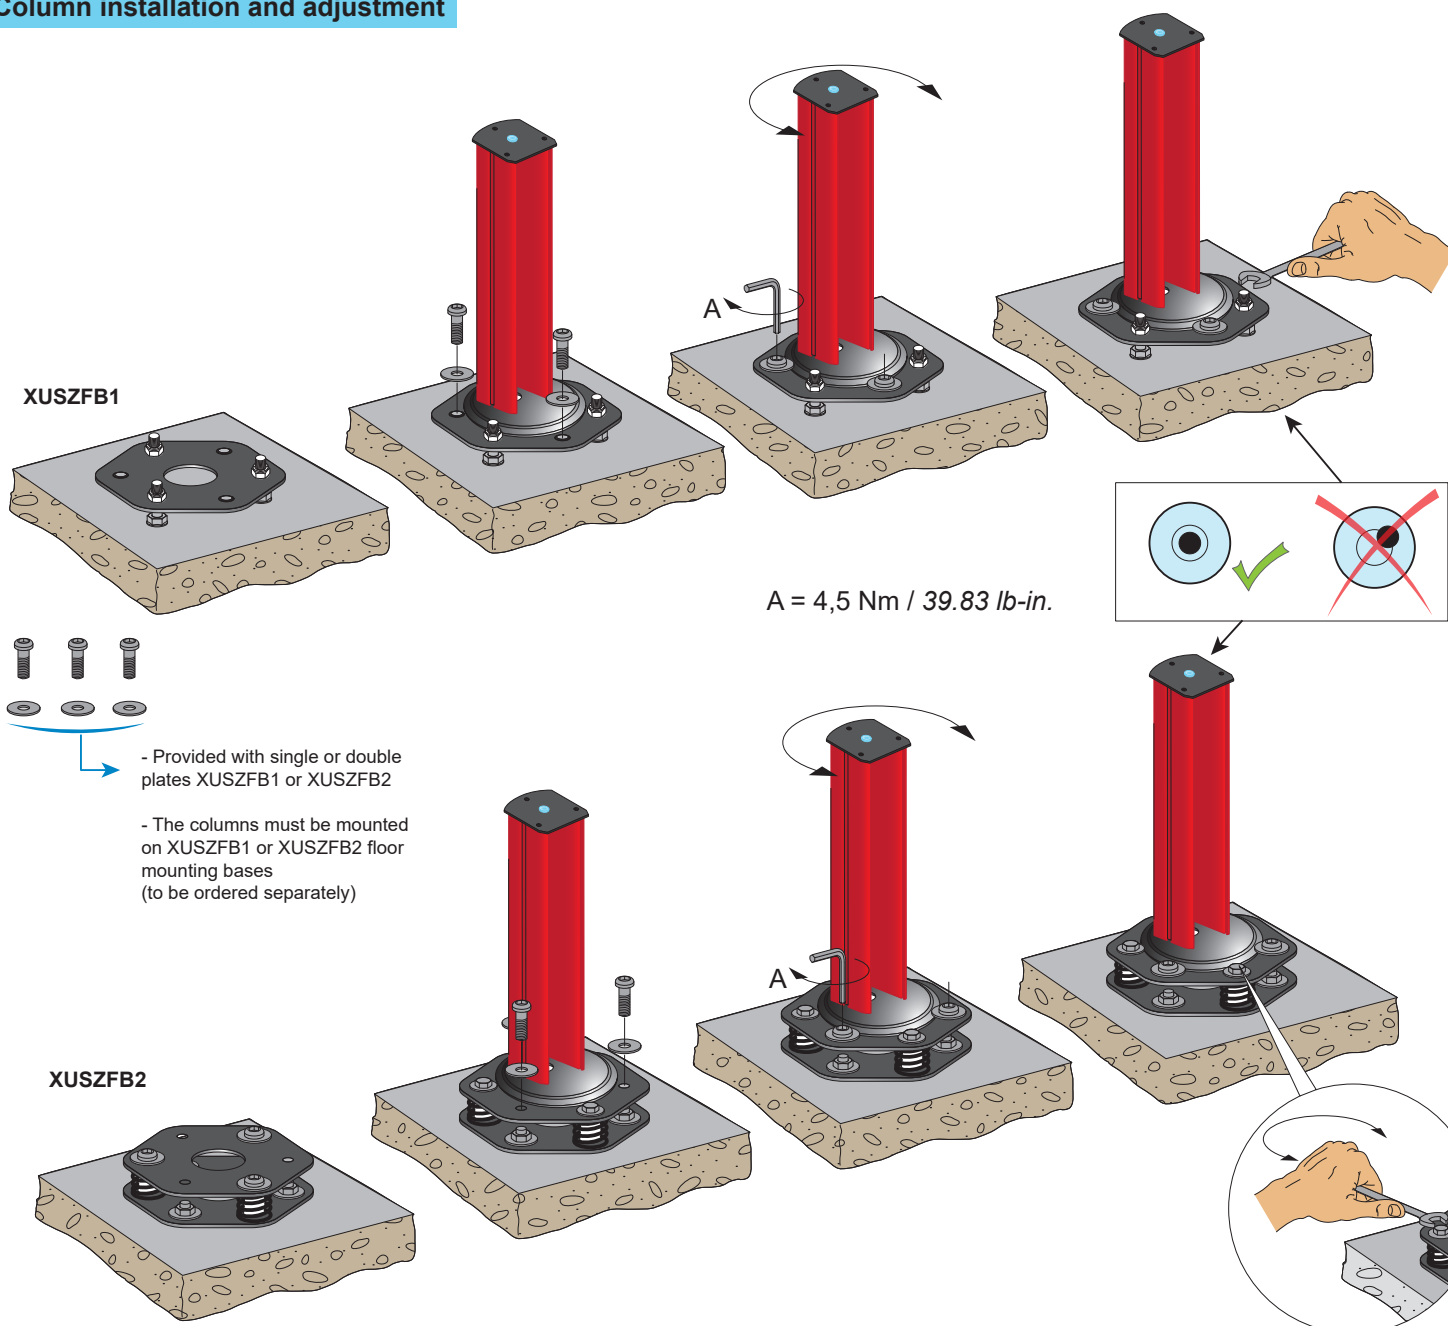


Column Assembly and Light curtain mounting in the column





Base plate fixing

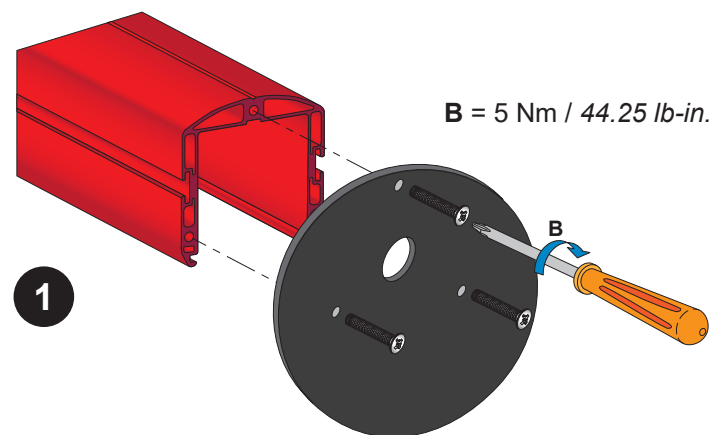


Provided with the column (XUZSM)

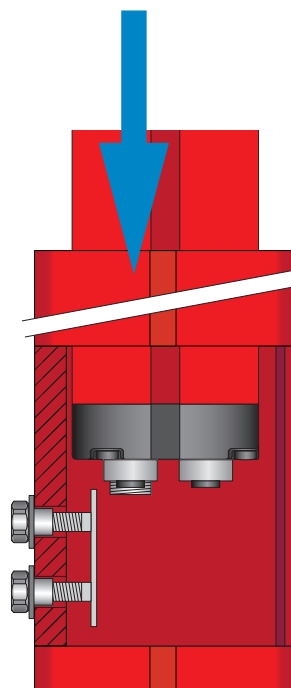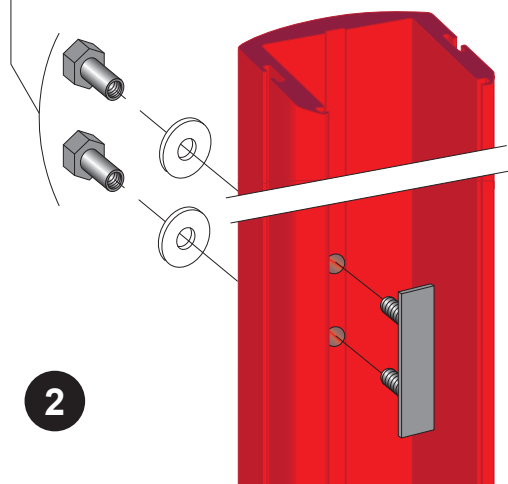


$C = 3,5 \text{ Nm} / 31 \text{ lb-in.}$

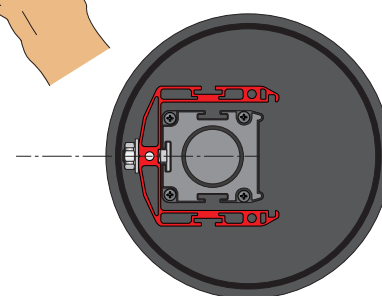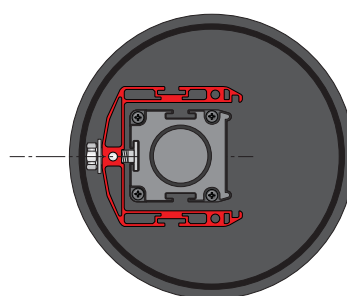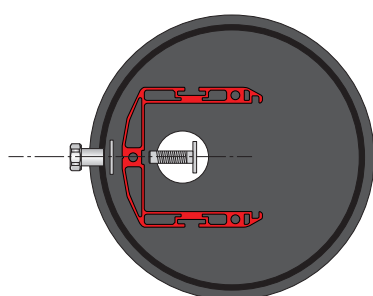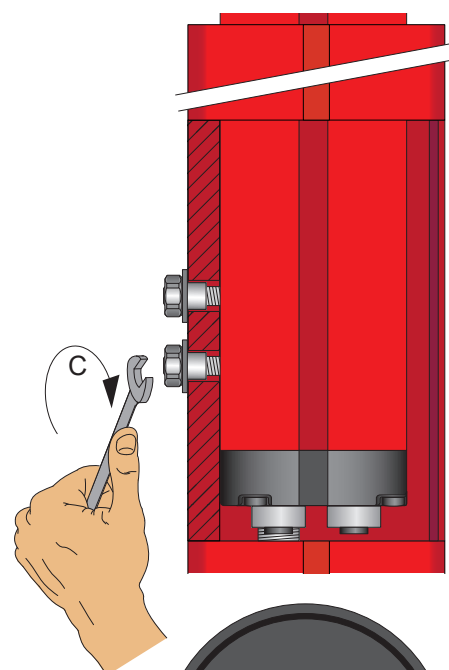


Top plate (with spirit level) fixing

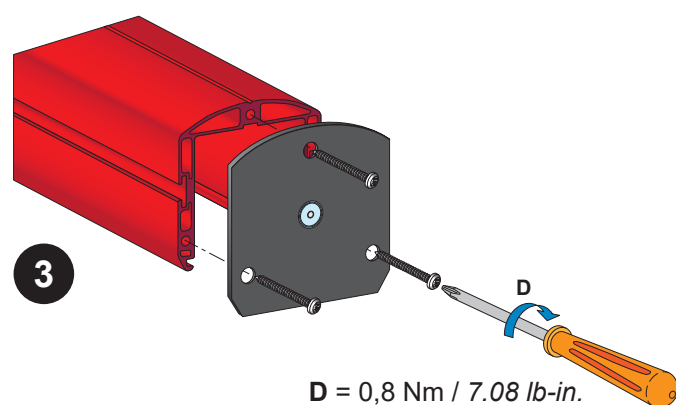


Arms mounting on the column

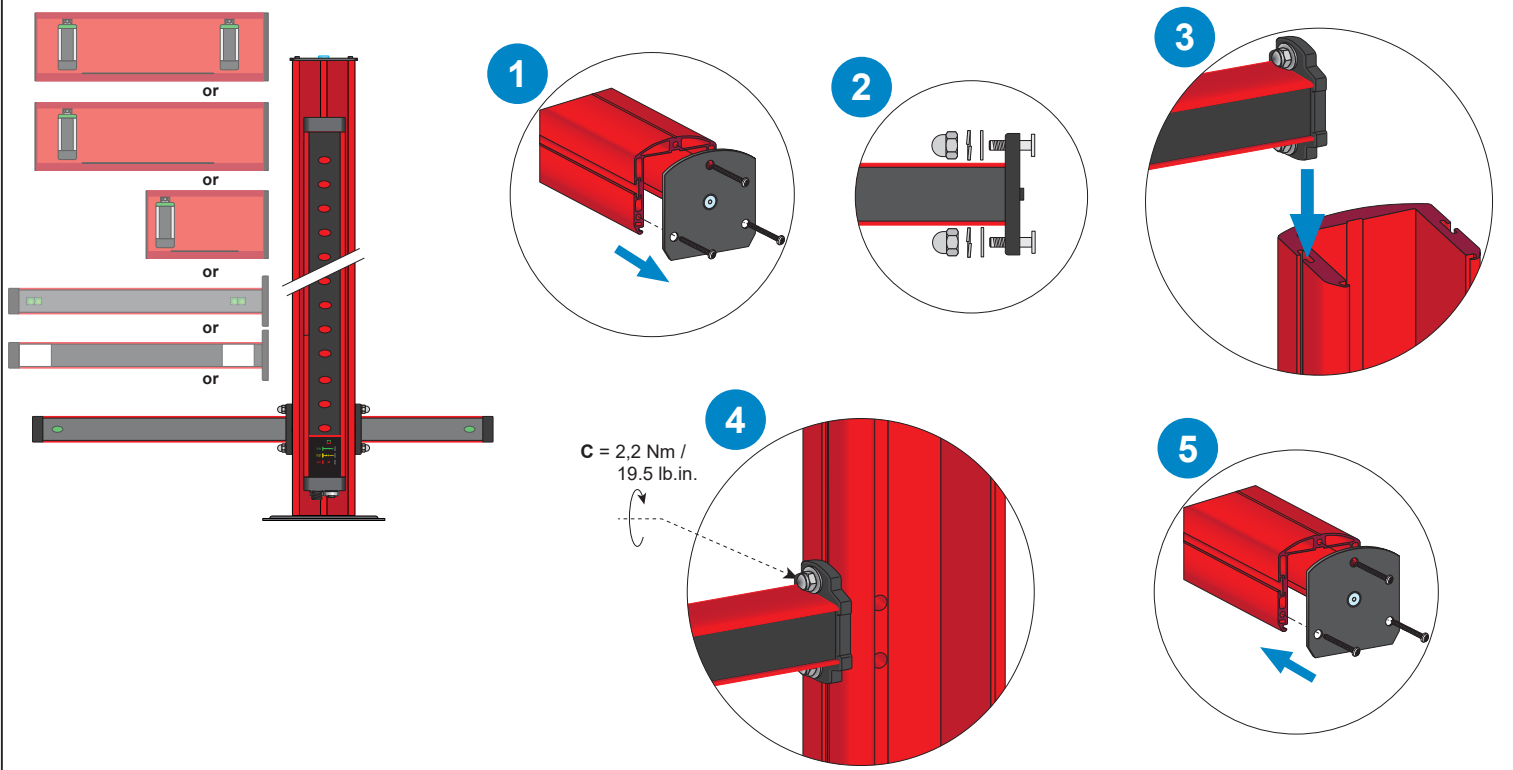



Dimensions

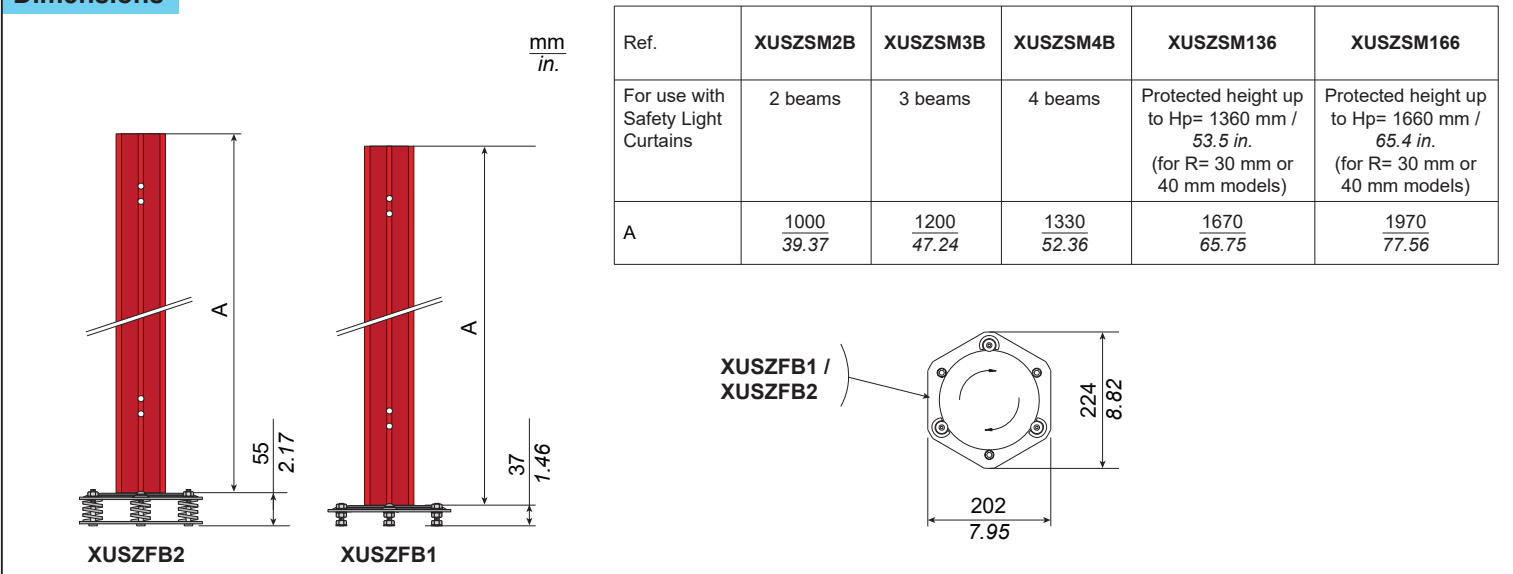

Distance between the first beam and the floor (H) (According to ISO 13855)

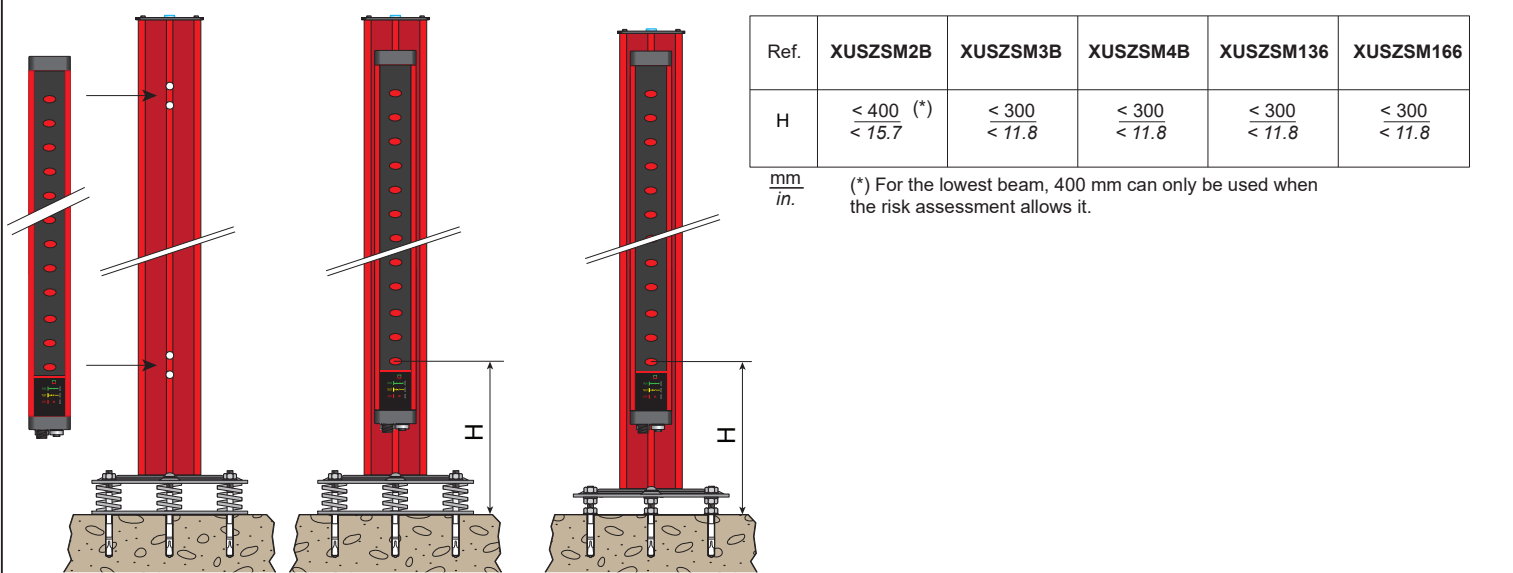

Transmitter and receiver alignment

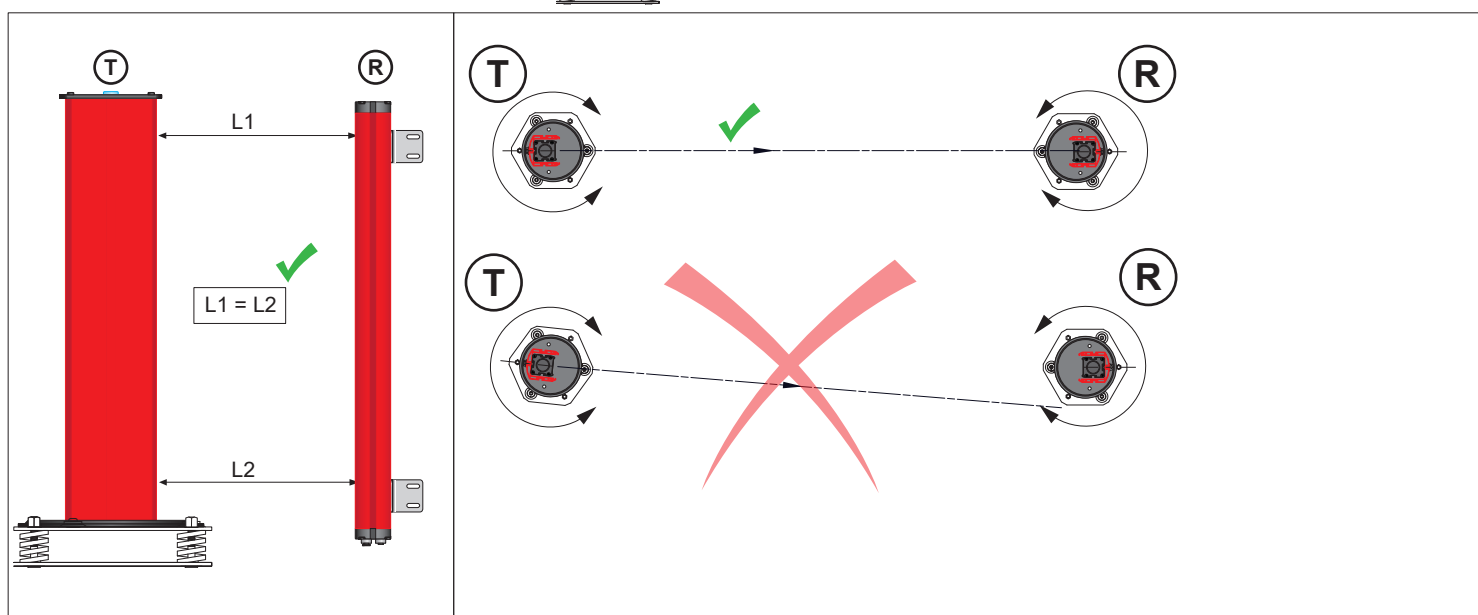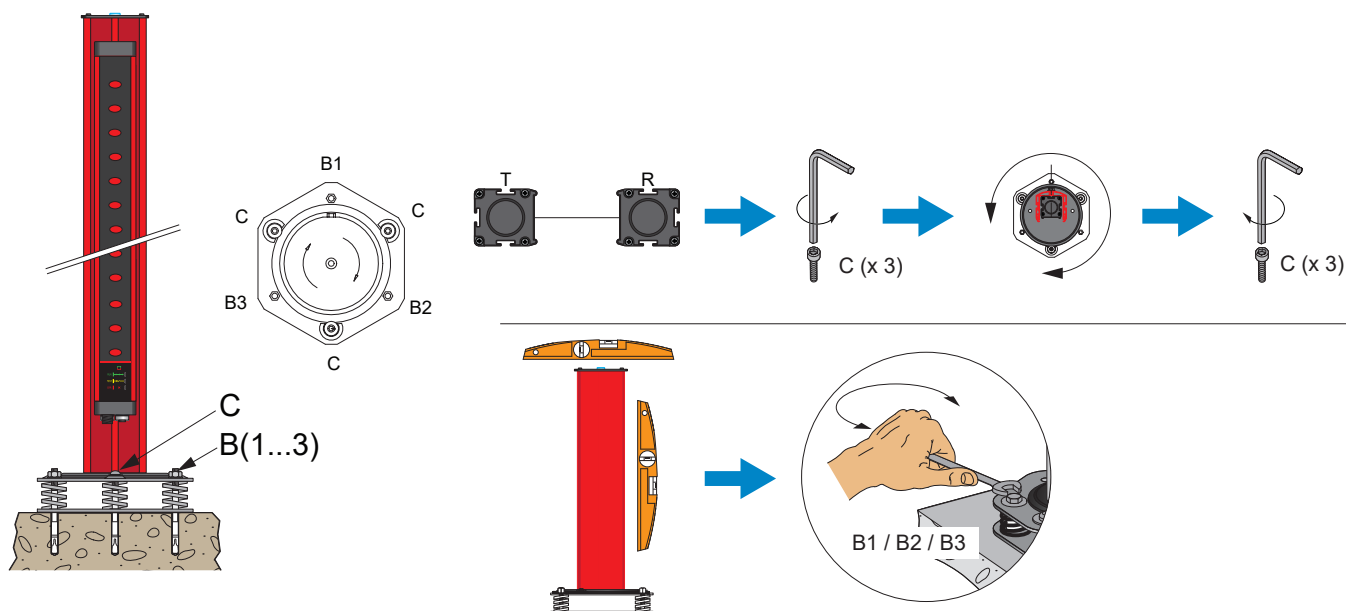

Cable routing

